




EV Charging Inverter Activation & Cable Installation Guide






This guide will help you install your EV Charger cable, activate your EV Charging Inverter and configure it to fit your needs

Package Contents

-  EV Charger cable
-  Wall-mounted holder (screws not included)
-  Cable lock & installation guide

Required Equipment

-  4 screws
-  Screwdriver
-  Drill

solaredge

 
/ CONNECTING & HANGING



A. Make sure inverter is installed




B. Make sure inverter is connected to SolarEdge monitoring platform



1




Connect EV Charger Cable to Inverter

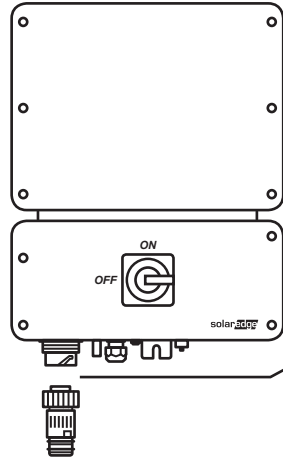

A. align


B. plug

C. rotate to fasten

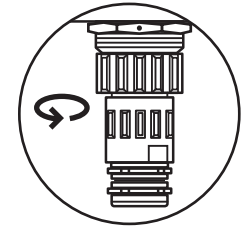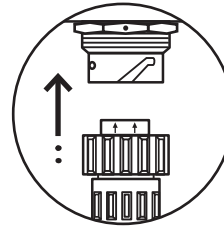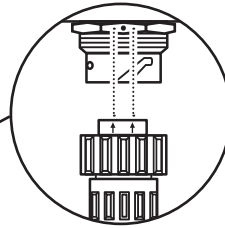

2

Determine Mounting Location

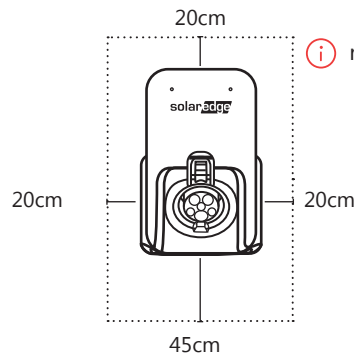

i reserve sufficient space

i To install the cable lock, refer to the separate installation guide

 


3

Mount Cable Holder

A. Disassemble

B. Mark



C. Drill holes

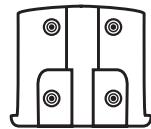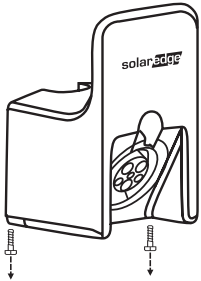

D. Lock cable


E. Slide

F. Fasten with two screws

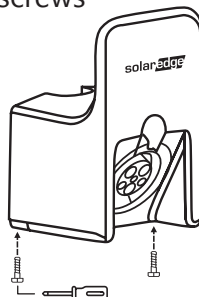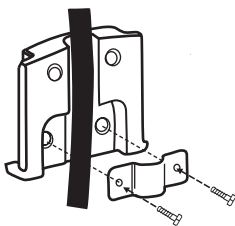

4

Connect Cable to Holder

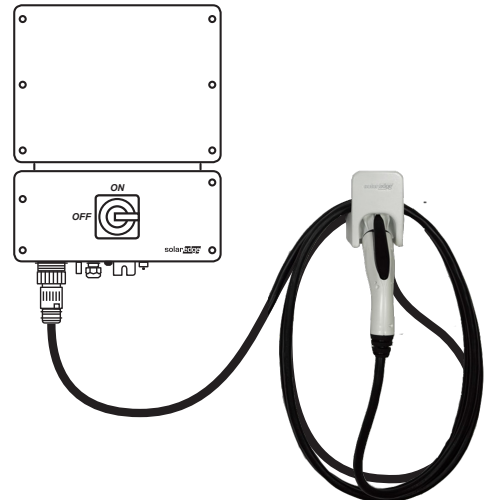

/ ACTIVATING & CONFIGURING



Connection to the SolarEdge Monitoring Platform is required for first time EV charging. For questions please contact your installer.

1

DOWNLOAD APP & LOG IN




For iPhone




For Android

A.

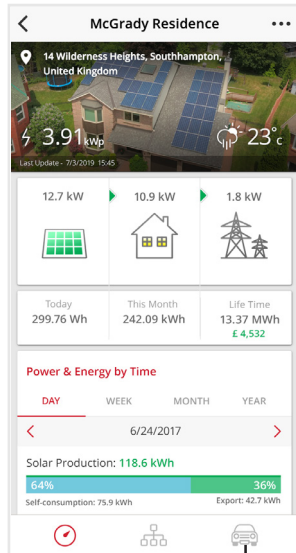

tap


B.

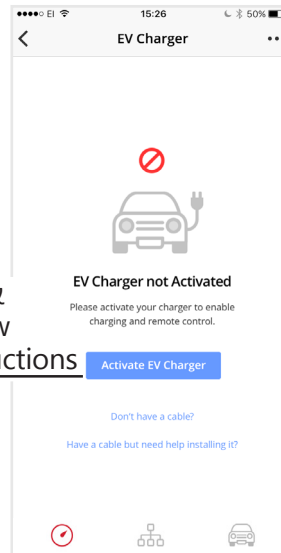

tap & follow instructions

Note: Access to camera is required in order to scan the cable QR code

C.

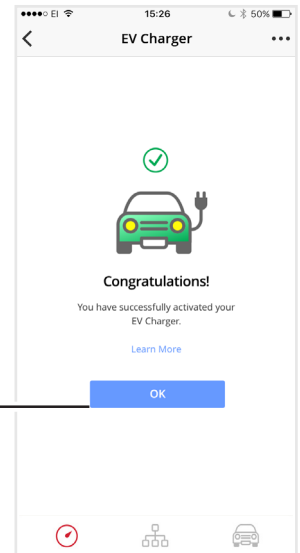


tap

2


CONFIGURE

A.

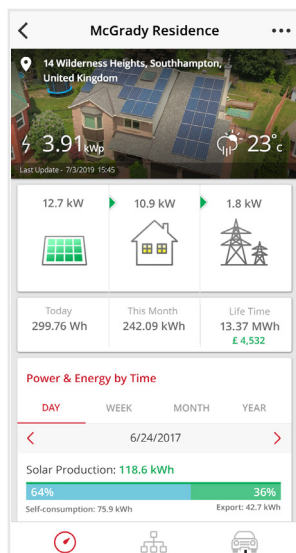

tap

B.

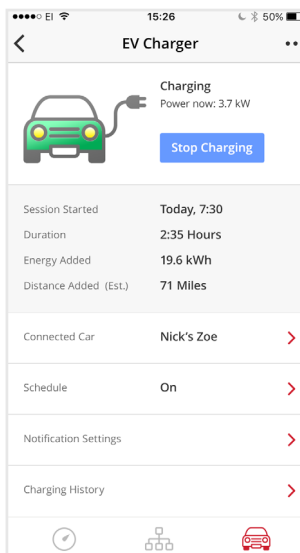

Charging status

Charging session information

Edit car details

Set up charging schedule



**YOU'RE ALL SET!
GET READY TO START CHARGING FROM THE SUN**

Connection options: Ethernet/Zigbee/Wi-Fi/Cellular (Refer to the inverter installation guide)

/ CHARGING

1

Verify that the green LED at the bottom of the inverter is flickering or blinking, indicating that the EV Charger is ready to charge.

2

Hold the EV Charger plug and disconnect the cable from the holder.

3

Connect the EV Charger plug to the charging socket of the vehicle and push firmly until it clicks into the socket. The inverter will sound 1 short beep and the green LED will start blinking to indicate a proper connection. The charging starts automatically, indicated by 2 short beeps followed by 1 long beep and the green LED is ON.

4

When the charging is complete, the green LED starts blinking.

5


Press the EV Charger plug latch and pull it from the EV charging socket.

6

Wind the EV Charger cable on the holder and connect the EV plug.

i For all LED indications and additional charging configurations, refer to the EV Charging Inverter installation guide and videos: solaredge.com/products/ev-charger/activation-and-configuration

/ LED

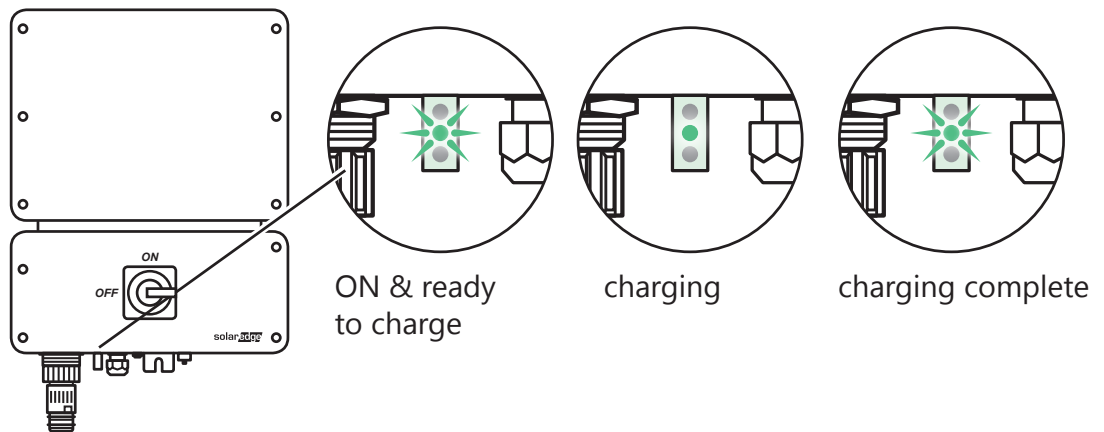

i In case the inverter has a display, refer to the '[EV Charging Single Phase Inverter Installation Guide v1.2](#)' for LED indications description.

About SolarEdge

SolarEdge is a global leader in smart energy technology. By deploying world-class engineering capabilities and a relentless focus on innovation, we create smart energy products and solutions that power our lives and drive future progress

f SolarEdge
t @SolarEdgePV
i @SolarEdgePV
y SolarEdgePV
in SolarEdge
e info@solaredge.com

solaredge

solaredge.com

© SolarEdge Technologies, Ltd.
All rights reserved.
Rv: 05/2019/V02/ENG EU.
Subject to change without notice.