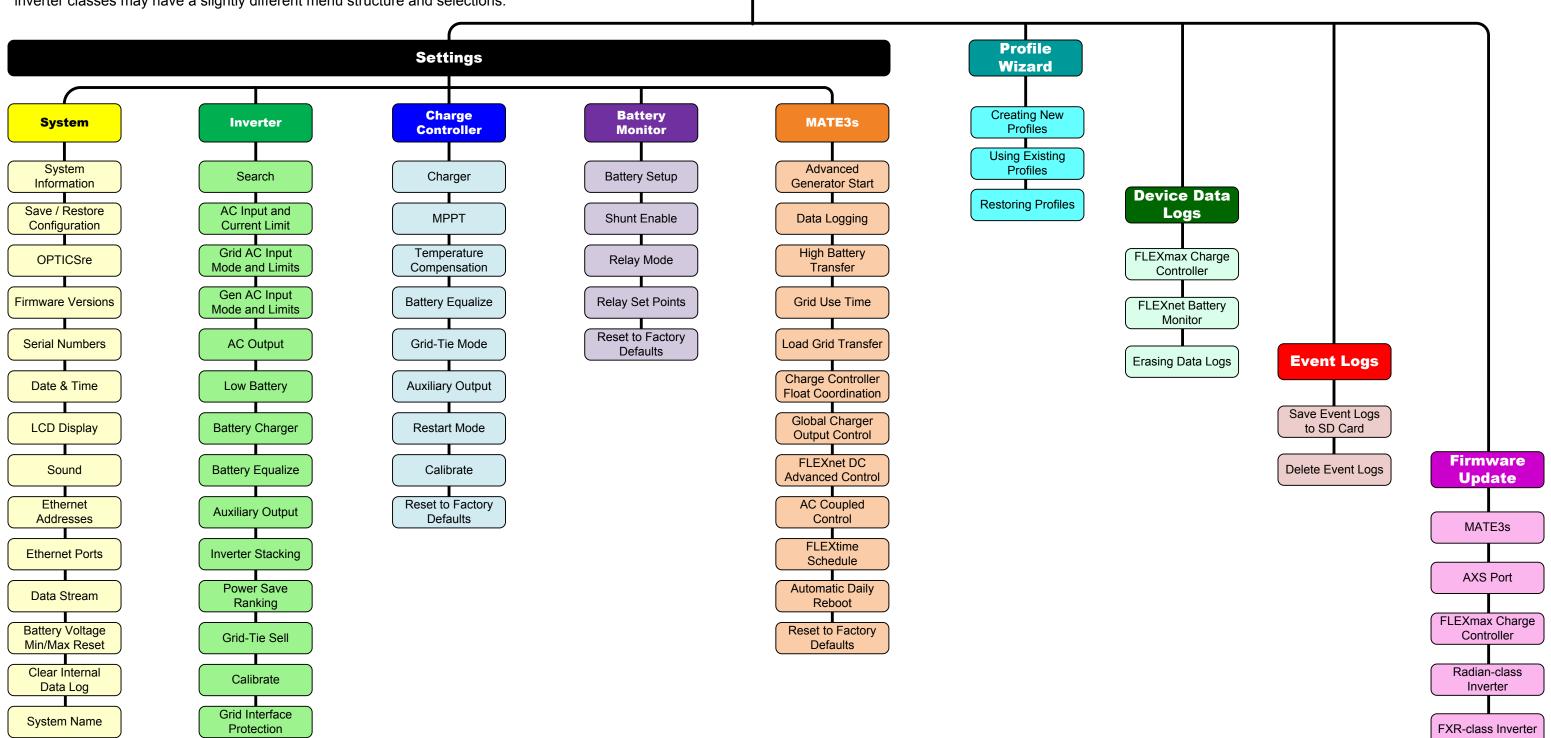# MATE3s System Display and Controller Menu Map

Menu Map

NOTE: This map depicts the menu structure for an FXR-class inverter. Other inverter classes may have a slightly different menu structure and selections.

Main Menu

Settings

System
- System Information
- Save / Restore Configuration
- OPTICSre
- Firmware Versions
- Serial Numbers
- Date & Time
- LCD Display
- Sound
- Ethernet Addresses
- Ethernet Ports
- Data Stream
- Battery Voltage Min/Max Reset
- Clear Internal Data Log
- System Name
- Installer Information
- Installer Settings (User Access Levels)

Inverter
- Search
- AC Input and Current Limit
- Grid AC Input Mode and Limits
- Gen AC Input Mode and Limits
- AC Output
- Low Battery
- Battery Charger
- Battery Equalize
- Auxiliary Output
- Inverter Stacking
- Power Save Ranking
- Grid-Tie Sell
- Calibrate
- Grid Interface Protection
- Model Select
- Reset to Factory Defaults

Charge Controller
- Charger
- MPPT
- Temperature Compensation
- Battery Equalize
- Grid-Tie Mode
- Auxiliary Output
- Restart Mode
- Calibrate
- Reset to Factory Defaults

Battery Monitor
- Battery Setup
- Shunt Enable
- Relay Mode
- Relay Set Points
- Reset to Factory Defaults

MATE3s
- Advanced Generator Start
- Data Logging
- High Battery Transfer
- Grid Use Time
- Load Grid Transfer
- Charge Controller Float Coordination
- Global Charger Output Control
- FLEXnet DC Advanced Control
- AC Coupled Control
- FLEXtime Schedule
- Automatic Daily Reboot
- Reset to Factory Defaults

Profile Wizard
- Creating New Profiles
- Using Existing Profiles
- Restoring Profiles

Device Data Logs
- FLEXmax Charge Controller
- FLEXnet Battery Monitor
- Erasing Data Logs

Event Logs
- Save Event Logs to SD Card
- Delete Event Logs

Firmware Update
- MATE3s
- AXS Port
- FLEXmax Charge Controller
- Radian-class Inverter
- FXR-class Inverter